

# MILENCO

## Ball Type Hitchlock fitting instructions

THINK READ PLAN

1. Insert key and turn anti-clockwise
2. Push base up to engage. Keep turning anti-clockwise until pins are fully inserted.  
(see image 1)
3. Place ball into Hitch head and push base up to engage, keep turning clockwise until it stops rotating. When this happens, the pins are fully extended.  
(see image 2)
4. Pull base down and turn key clockwise to lock in place.
5. To remove, repeat step 1 and 2.



Pins

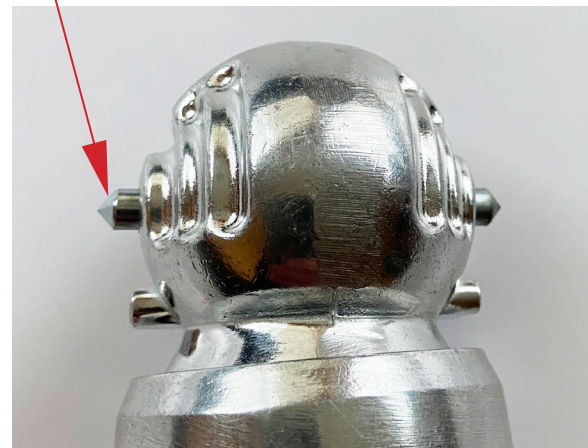


Image 1

Image 2